



Instructions for Wall Ceiling Varifocal Bullet Dome Bracket Installation

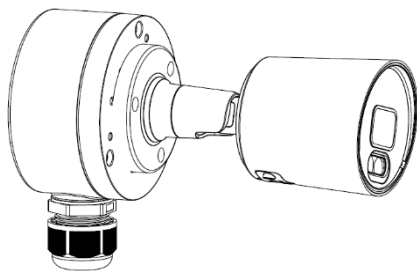


P/N: RVIM0CXHI0RA

Quick Guide

Box Dimensions

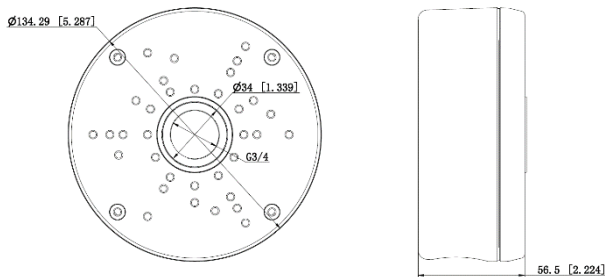


Accessories

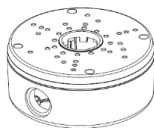


RVIM0CXHN0RA




Waterproof Plug

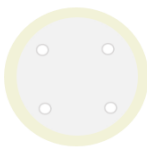

Mounting Paper




Screw B

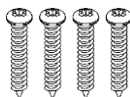

Screw C


Tools

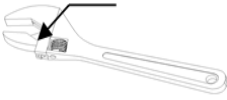


Monkey Wrench



Hex Wrench

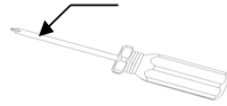


Cross Screwdriver

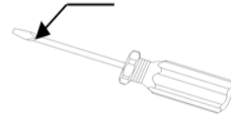


Straight Screwdriver

Wall Mounting


1. Paste the mounting paper to the corresponding installation position and make screw holes.
2. Hammer four screws **B** into the holes and lock the bottom cap of the junction box with screws **C** as shown below.

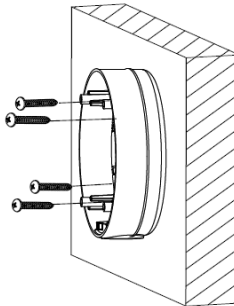

3. Thread the camera cable through the center of the top cover of the box and lock the camera base as shown below.

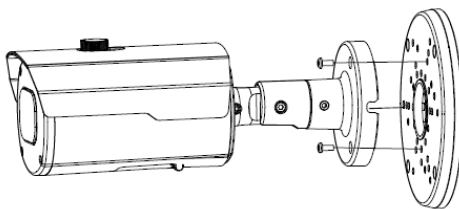

4. Connect the cable to the camera through the waterproof plug and tighten.
5. Lock the top cover to the bottom cap and adjust the camera angle to complete the installation.

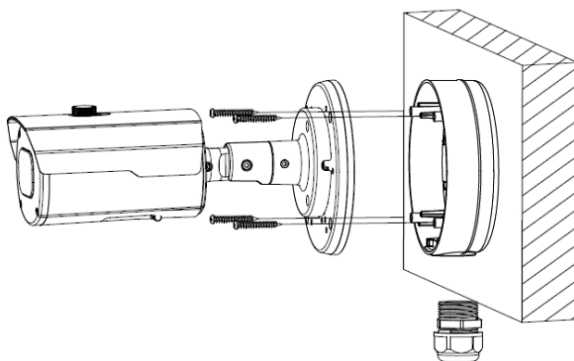

Supported Camera

P/N	Description
RVCM92A370RA	VUpoint 5MP PoE Thermal Bullet AI Camera

